


1. Open the cover of the arm with the cross screwdriver.

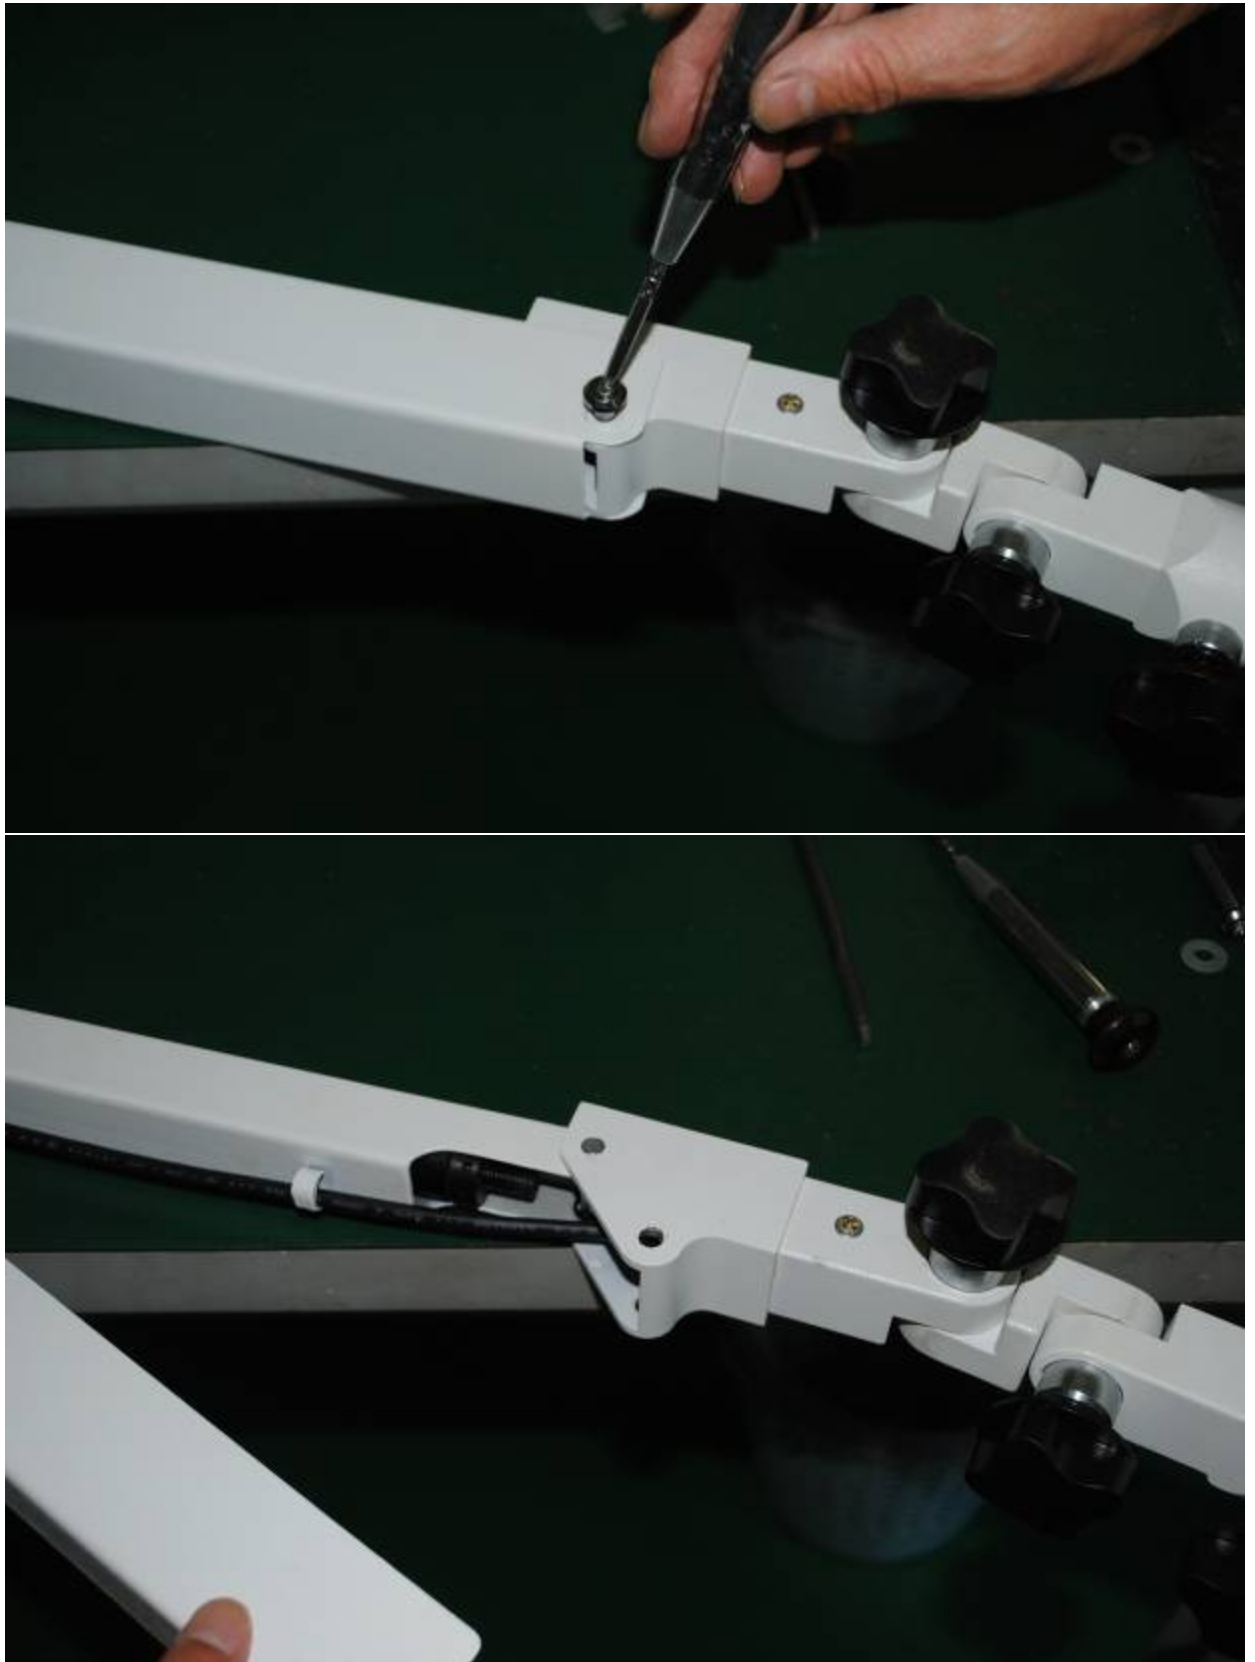

2. Rotate this screw at least 3 circles in clockwise rotation. Don't rotate too much. Because the arm will springback when it was rotated too much. After adjustment, please have a try whether appropriate , then put on the cover.



2014-9-2